




1.) SURVEY LOT AND LOCATE THE DATUM POINT

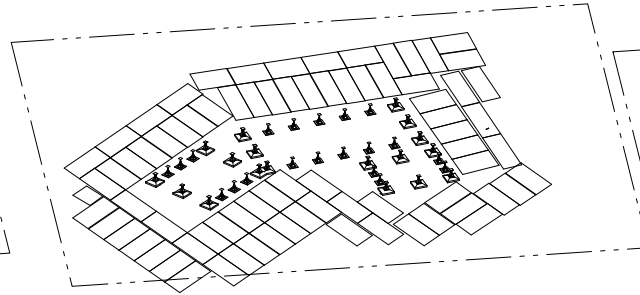


2.) PLACE FOOTINGS AND HEAVY EQUIPMENT PADS

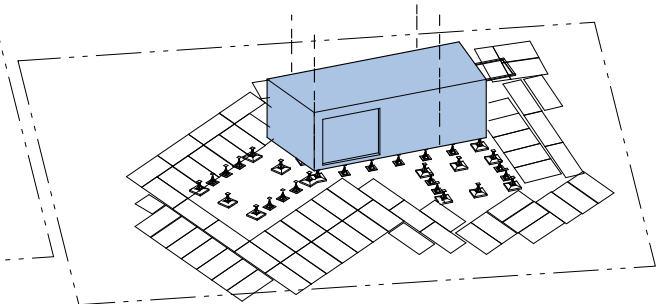


3.) PLACE AND LEVEL MODULE B

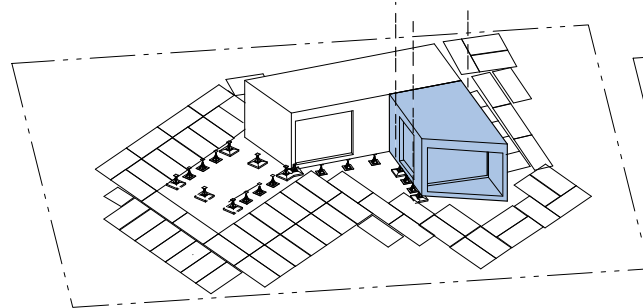


4.) PLACE AND LEVEL MODULE C,  
CONNECT MODULE C TO MODULE B.

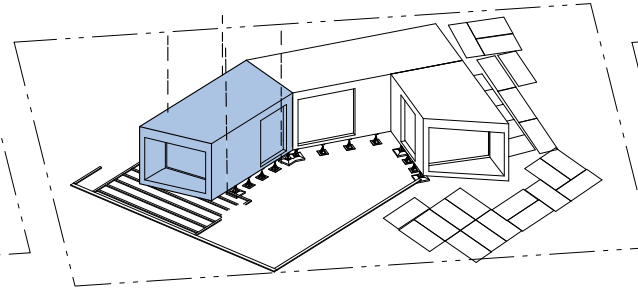


5.) PLACE AND LEVEL MODULE A.  
CONNECT MODULE A TO MODULE B.

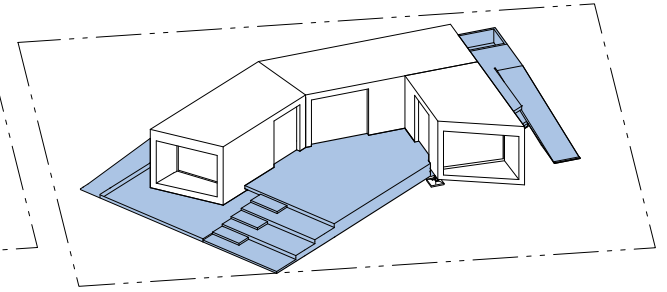

6.) INSTALL MECHANICAL SKID AND DECK

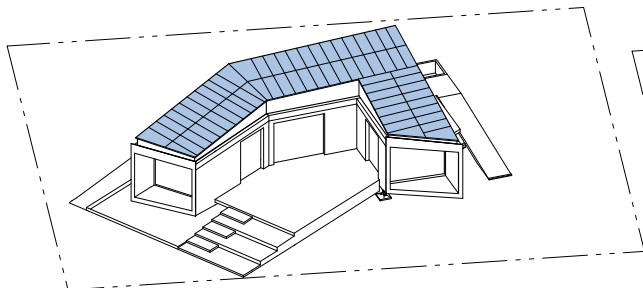

7.) INSTALL THE PV AND CONNECT ALL M.E.P. SYSTEMS  
TO THE HOUSE. GRID TIE CONNECTION

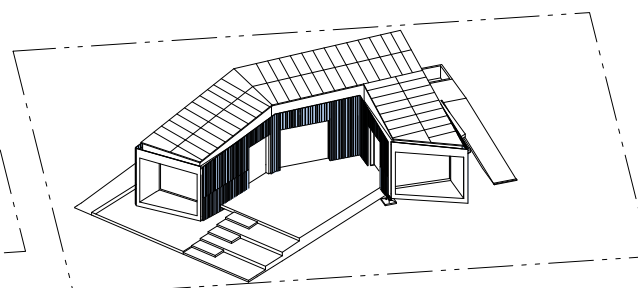

8.) ATTACH SKIN AND MOVE IN